




Fitting Instructions for DG0002 BK Downpipe Grille
TRIUMPH TIGER 800 2011

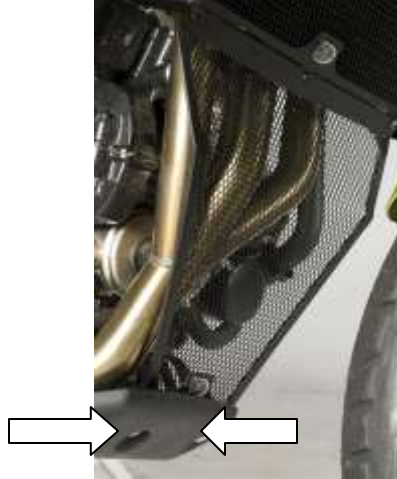

In This Kit There Should Be
1x Downpipe Grille (DG0002)
3 x M6x12mm long button head bolts
3 x M6 Nyloc Nuts
6 x M6 Washer

- To fit the downpipe grille, loosen the two bolts at the front of the sump guard arrowed in picture above.
- Slide the downpipe grill between the sump guard and its mounting bracket so the slots in the downpipe grille can be clamped using the sump guard bolts.
- Using the bolts, nuts and washers from kit secure the downpipe grille to the R&G radiator guard (RAD0101bk) as shown above.
- Tighten all bolts.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.


R&G Racing
Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



FRANCE

Instructions de montage de la grille R&G DG0002 BK

TRIUMPH TIGER 800 2011

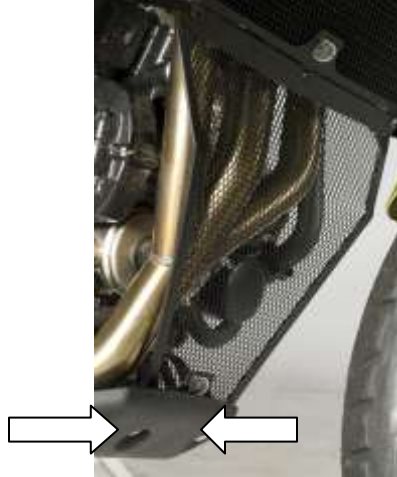

Ce kit doit contenir:

1x Grille (DG0002)

3 x Vis M6x12mm

3 x Ecrous autobloquants M6

6 x Rondelles M6

- Pour fixer la grille, desserrez les 2 vis présentées sur la photo ci-dessus. Vis situées sur le sabot moteur.
- Glissez la grille entre le sabot et les pattes de fixations du sabot. Attention au sens de montage, cf. photo.
- A l'aide des vis, rondelles et écrous livrés dans le kit, fixer la grille R&G sur la protection R&G RAD0101.
- Serrez toutes les vis.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



Montageanleitung für das Krümmerschutzgitter DG0002 BK
TRIUMPH TIGER 800 2011



Dieser Kit enthält:

1x Krümmerschutzgitter (DG0002)
3 x M6x12mm Inbusschrauben
3 x M6 selbstsichernde Mutter
6 x M6 Unterlegscheiben

- Um das Krümmerschutzgitter zu montieren, lösen Sie die zwei Schrauben vorne auf dem Ölwannenschutz (siehe Bild oben).
- Schieben Sie das Krümmerschutzgitter zwischen den Ölwannenschutz und seine Halterung. Die Schlitze im Krümmerschutzgitter werden dann beim Eindrehen der Schrauben vom Ölwannenschutz eingeklemmt.
- Verwenden Sie die Schrauben, Mutter und Unterlegscheiben vom Kit, um das Krümmerschutzgitter am R&G Kühlerschutz (RAD0101BK) wie oben abgebildet zu befestigen.
- Ziehen Sie alle Schrauben fest.